

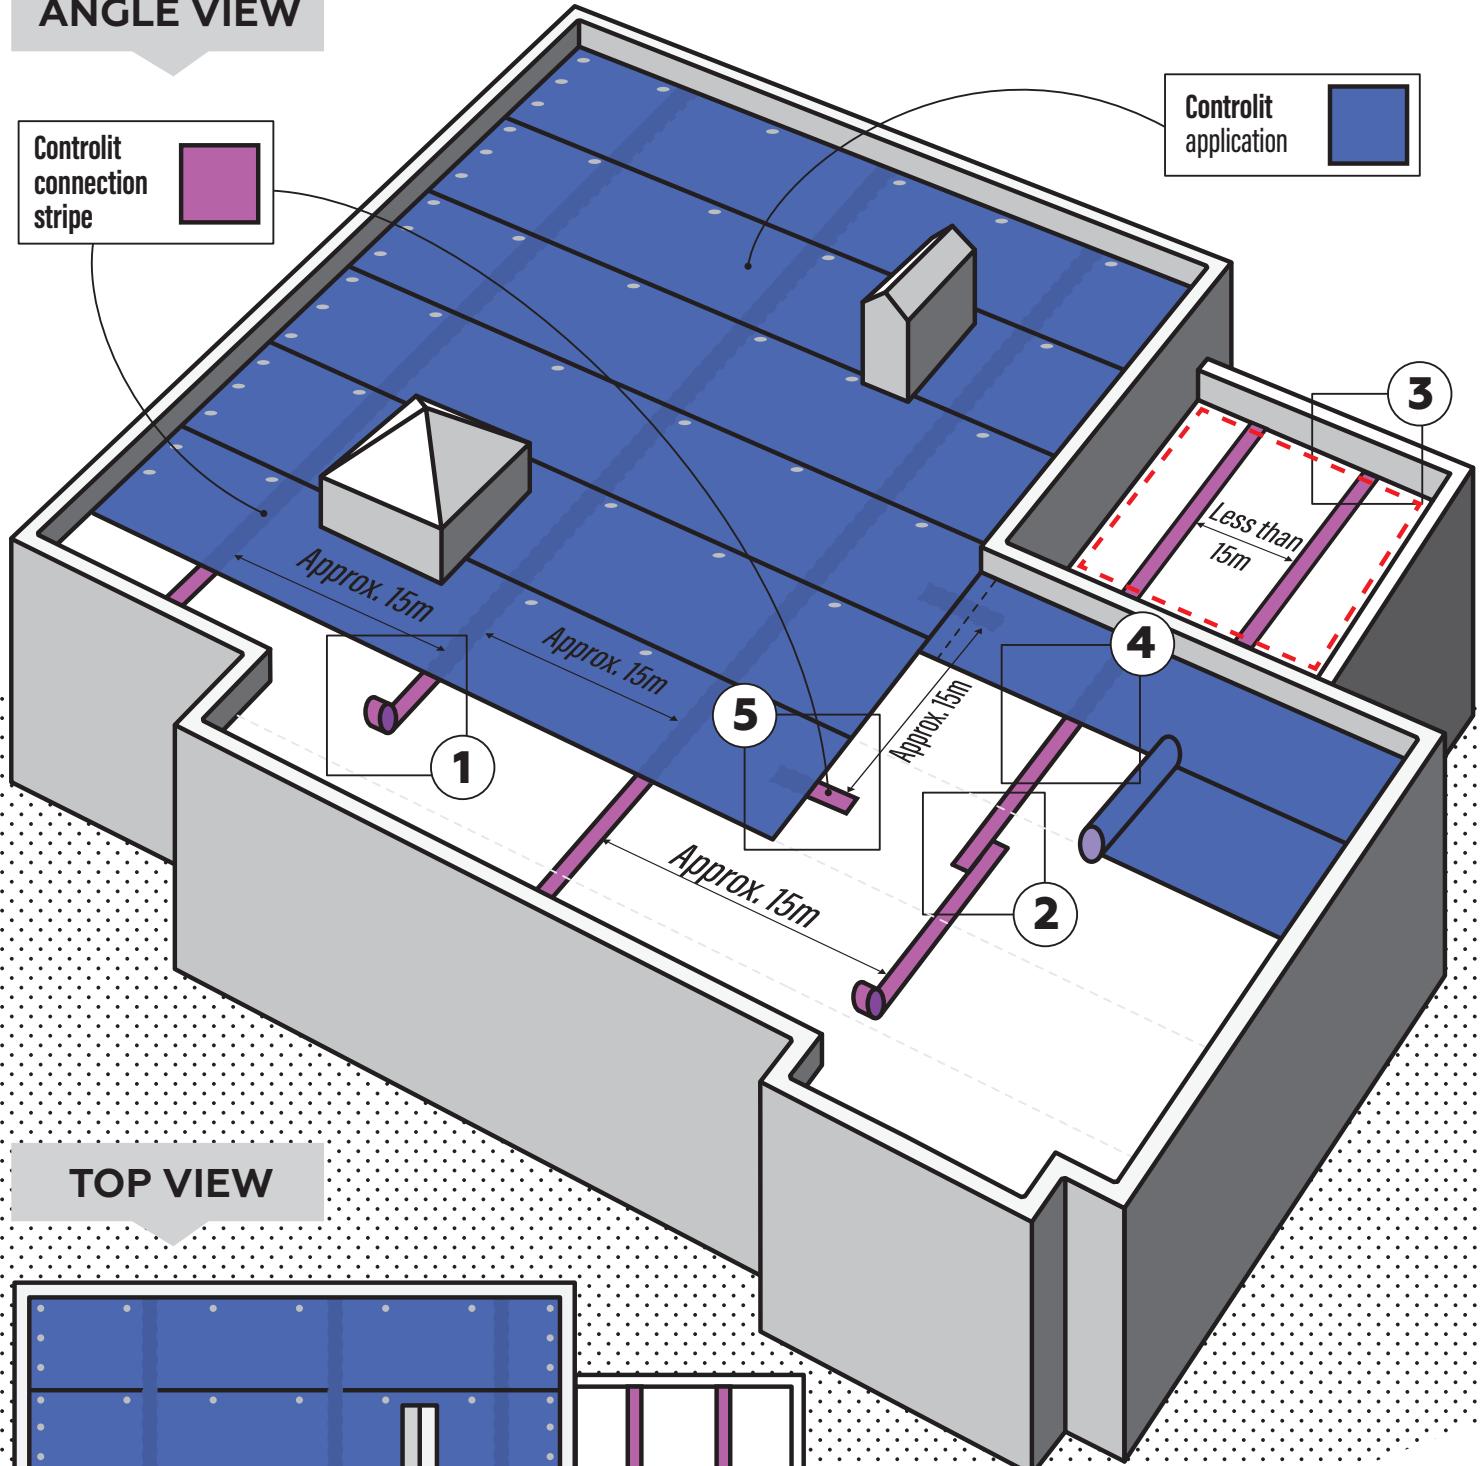


ANGLE VIEW

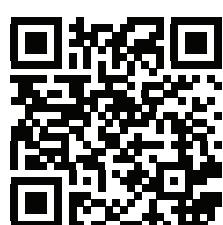


TOP VIEW

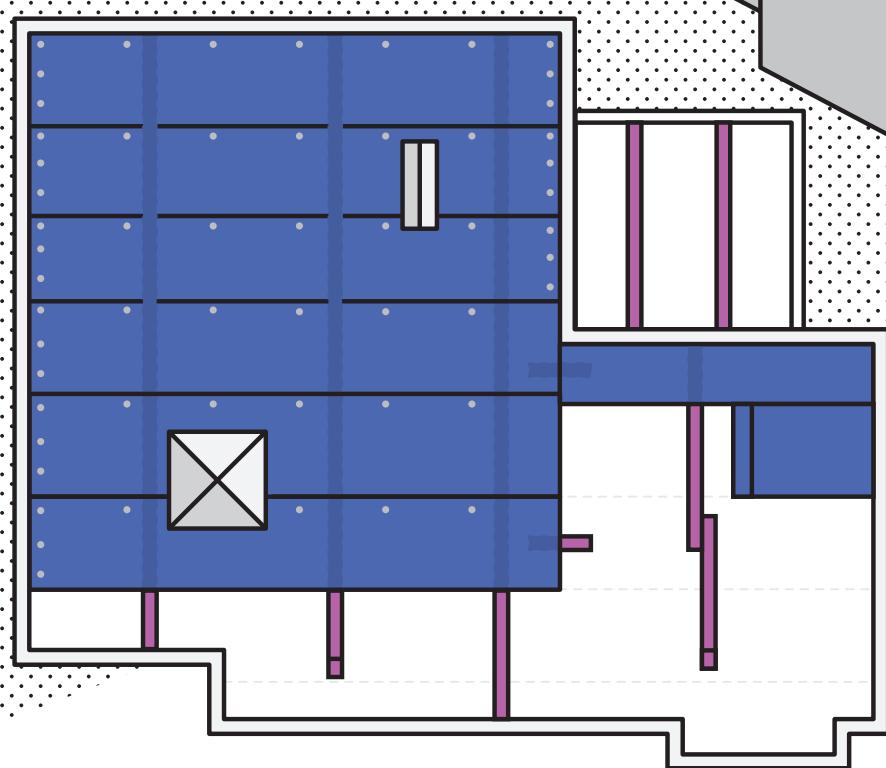


Scan for video
instructions



CONTROLIT CONNECTION STRIPE APPLICATION

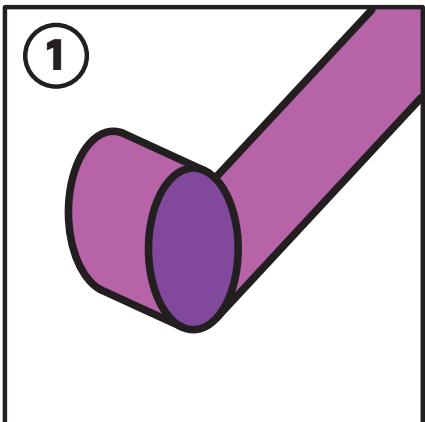


1. Controlit connection stripes must be freely rolled on horizontal surface only.

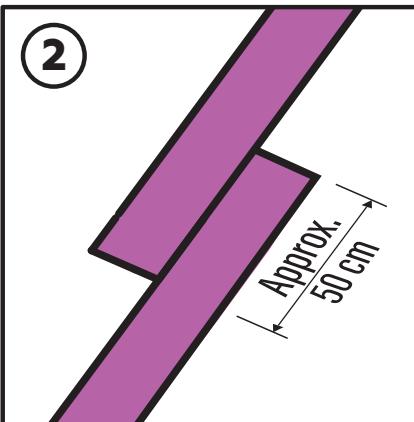


2. When you need to connect new roll of connection stripe, align it next to the other with an indent of 50 cm.

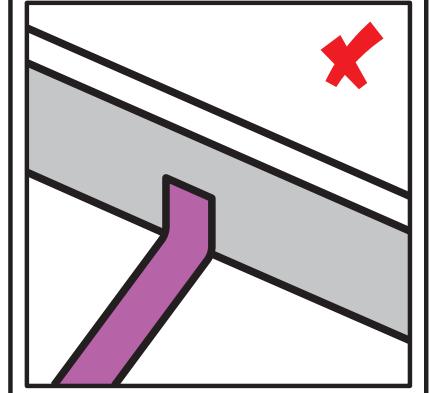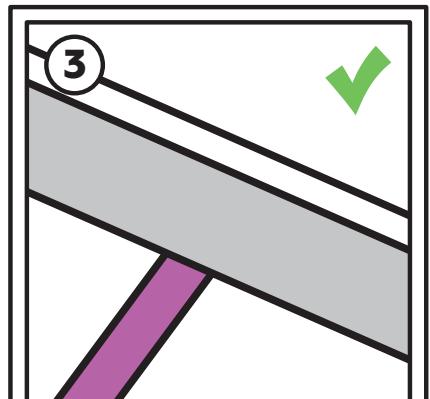

3. Controlit connection stripes must be rolled on horizontal surface only
Controlit connection stripes **are not** applied on vertical surfaces!

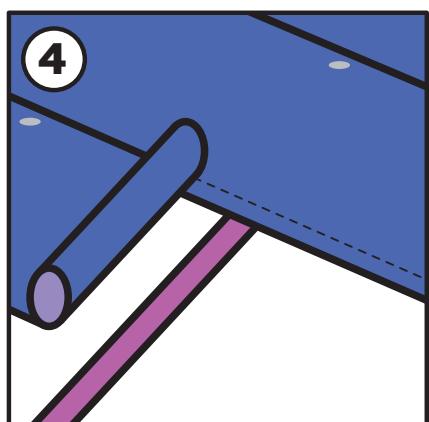

4. **IMPORTANT!** Connection stripes must always be placed perpendicular to the direction of the Controlit as shown in visualisation.

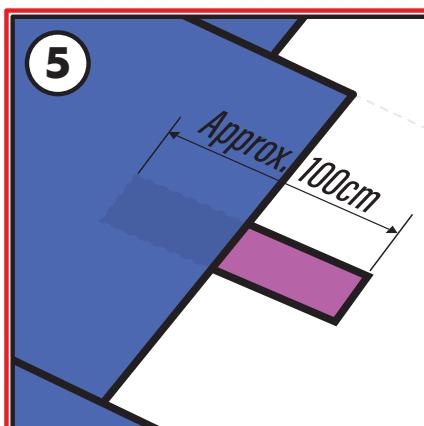

5. **IMPORTANT!** When a roof is built in several sections, each transition between two sections must include 100 cm Controlit connection stripes placed every 15 meters with at least **two** stripes used. This ensures electrical continuity across the entire roof.



IMPORTANT! On smaller roofs where placement of Connection stripes every 15 m are impossible, must place minimum 2 stripes. (See the red dashed line area in visualisation of page nr.1)